

Set up Instructions for Alarm and Anti unlock functions


Alarm function

When this function is activated, an alarm sound and light will turn on for approximately 5 minutes duration.

Anti-Bypass function

When this function is activated, the internal handle will become tightened to prevent bypass attempts through door edge tools will be minimized.


Set up the Alarm function

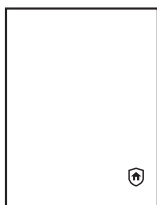

 DING DONG DENG

When the door is closed, user can set up the alarm function by pressing and holding the [] button for 3 seconds until sound confirmation.


Set up the Anti-Unlock function

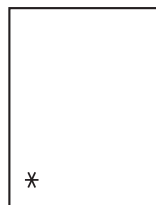


 DING DONG DENG

Press [] and hold.
After 3 seconds, the alarm will be come active.

 Release the Alarm function



OR

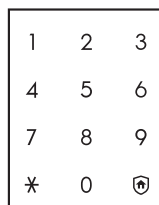

Touch the keypad to turn on.
Present a registered RF tags/card or password and press [] to release.

Release the Anti-Bypass function



 BEEP BEEP BEEP ~

Press the [**CLOSE**] button to release the internal handle from Anti-Bypass function.

When this function is active, it may be harder to pull the internal handle for elderly or children to open the door from inside.



Warning

- Anti-Bypass function should only be set up when there is no one inside.

安防，防止外部强制开门功能 设定/解除


安防功能

外出时防止外部入侵的功能，当有人在室内对电锁进行操作时发出报警音。
设置安防功能状态下，若有人在室内开门，室外侧紧急报警灯会闪动同时持续5分钟发出“哔~哔~哔~”的报警音。

防止外部强制开门功能


外出时防止他人以非正常手段操作室内门锁把手，通过机械式再次锁定防止外部人员强制开门的功能。

安防功能设定

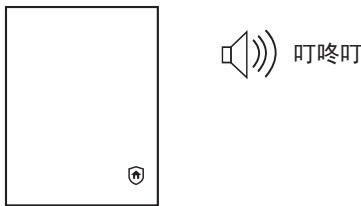


关门后室外侧按键板的[🛡️]按键会亮灯，3秒内按下[🛡️]按键完成安防功能设定。

防止外部强制开门功能设定

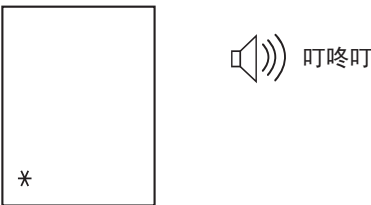


安防功能设定后3秒内按下[*]按键完成防止外部强制开门功能设定。

安防功能，防止强制开门功能，解除报警音

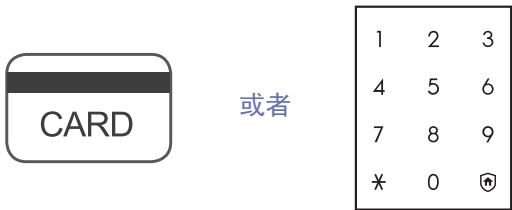

触摸按键板后进行刷卡或者输入密码，随后按下[*]按键。

 解除防止室内强制开门功能



若在室内有人的情况下设置了防止外部强制开门功能，老弱者开门会比较吃力可以按下[CLOSE]键解除机械式的锁定状态后轻推把手即可开门，此时会发出“哔~哔~哔~”的报警音。



注意

- 防止外部强制开门功能必须在家里没有人的情况下设定使用。